

LEA Connect 3.1.8.0 Firmware Update Readme

***NOTE – This firmware file is for all 80, 160, 350, and 700 watt models. The 1504 and 1504D requires a separate firmware file.

Firmware update instructions:

- The firmware updater is located in the WebUI in the top right corner. Click the Hamburger Menu, Choose File, and then Update Firmware.
- Click 'Choose Firmware File' <u>unzip the firmware update file</u> and select .tar.xz file (ASBT-3-1-8-0-V2.tar.xz.enc) then click "update amps"
 - **NOTE 1:** This firmware file works for ALL LEA Connect Series Amplifiers.
 - **NOTE 2:** All amplifiers on the same network will be updated.
- The shark fin will turn magenta during the update process, please do not turn off or power cycle the amplifier until the firmware update is complete.
- Once the shark fin is blue and the LCD screen is illuminated, the firmware update process is complete.
- While not required, it is recommended to power cycle the amp with the power cord after the firmware update is complete.
- 350W and 700W models will take ~5 minutes to update firmware
- 80W and 160W models *may* take up to 15 minutes to update firmware

To Confirm the update was successful, click on the ① and then Amp Settings. Scroll down to Device Information and you should have the following Firmware versions:

350W and 700W Models:


Firmware Version: 3.1.8.0 Power Supply Version: 2.1.2.0

Amp1234 Version: 2.1.3.0


80W and 160W Models:

Firmware Version: 3.1.8.0 Power Supply Version: 2.1.1.0 Amp1-8 Version: 2.1.2.0


Click the Hamburger Menu

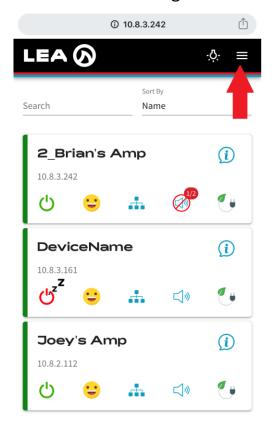

Click 'Firmware Update'

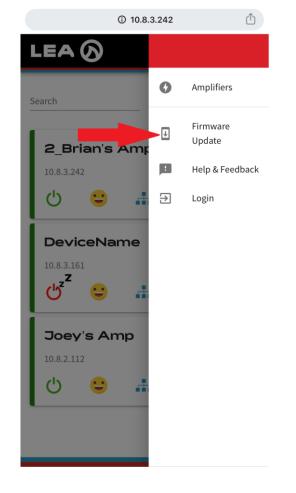

- 1. Choose file: ASBT-3-1-8-0-V2.tar.xz.enc
- 2. Click 'Update Amps'

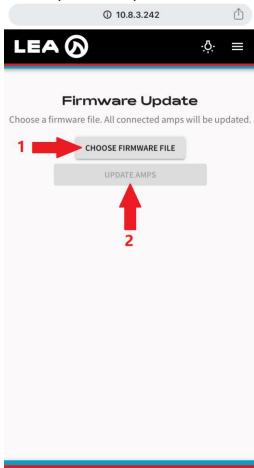

Features and Improvements in 3.1.8.0 V2:

General update Notes

- Resolves boot up issue with low AC line conditions
- Resolves an issue with connection to the LEA China Cloud

Additional Firmware Update Information:

https://leaprofessional.com/blog/connect-series-firmware-v3/

Copyright © 2024 LEA Professional. All Rights Reserved.